


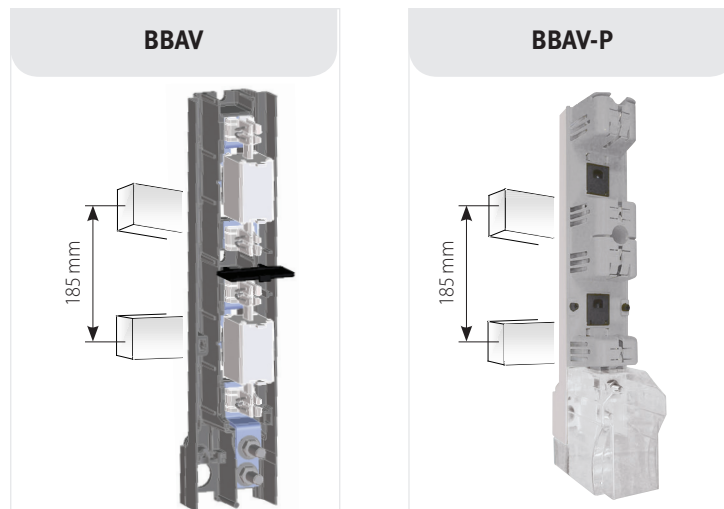

Gama / Range

Referencia Reference	Tipo Type	Intensidad Current	Fusible Fuse-Link
439.24.06.XX.00	BBAV base bipolar abierta sin protección / BBAV 2 pole Fuse rail without protection	160 A	NH 1
439.24.06.XX.03	BBAV-P base bipolar abierta protegida / BBAV-P 2 pole Fuse rail with protection	160 A	NH 1
439.25.18.XX.00	BBAV base bipolar abierta sin protección / BBAV 2 pole Fuse rail without protection	250 A	NH 1XL
439.25.18.XX.10	BBAV-P base bipolar abierta protegida / BBAV-P 2 pole Fuser rail with protection	250 A	NH 1XL
439.25.18.XX.11	BBCV base bipolar cerrada / BBCV 2 pole Fuse disconnecter	250 A	NH 1XL
439.26.18.XX.00	BBAV base bipolar abierta sin protección / BBAV 2 pole Fuse rail without protection	250 A	NH 2XL
439.26.18.XX.10	BBAV-P base bipolar abierta protegida / BBAV-P 2 pole Fuse rail with protection	250 A	NH 2XL
439.26.18.XX.11	BBCV base bipolar cerrada / BBCV 2 pole Fuse disconnecter	250 A	NH 2XL
439.27.38.XX.00	BBAV base bipolar abierta sin protección / BBAV 2 pole Fuse rail without protection	500 A	NH 3L
439.27.38.XX.10	BBAV-P base bipolar abierta protegida / BBAV-P 2 pole Fuse rail with protection	500 A	NH 3L
439.27.38.XX.11	BBCV base bipolar cerrada / BBCV 2 pole Fuse disconnecter	500 A	NH 3L

NH 1



NH 1XL / NH 2XL / NH 3L

