


Terminales / Terminals

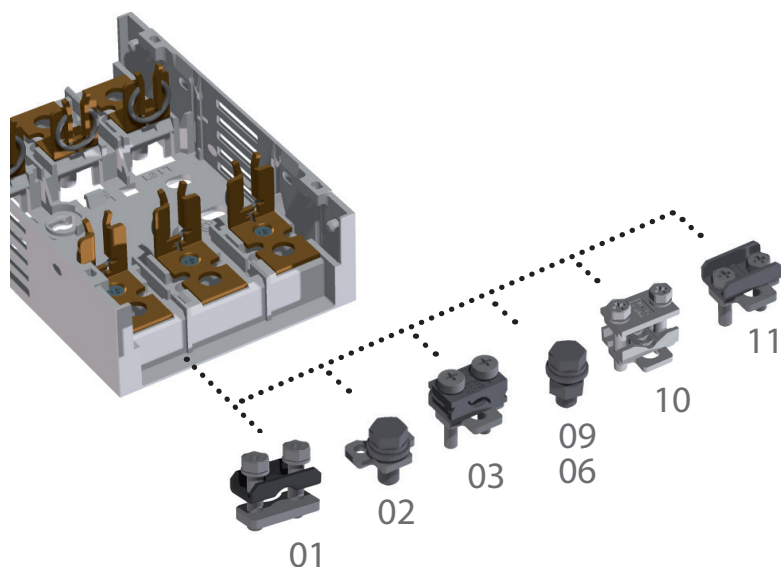

Código XX XX Code	Tipo de terminal Type of terminal	Par de apriete Torque (Nm)	Sección de cable / Cross section (mm ²)			
			rm	re	sm	se
01*	Terminal brida Bridge terminal	2,5	10-70	6-70	35-70	50-70
03	Terminal prisma-70 mm ² Prism terminal-70 mm ²	2,5	10-70	10-70	35-70	50-70
02**	Tornillo M8x16, A2 M8 x 16 screw A2	12				
06***	Tornillo M8x16, Zn M8 x 16 screw Zn	12				
09***	Tornillo M8x16, A2 M8 x 16 screw A2	12				
10	Terminal prisma-95 mm ² Prism terminal - 95 mm ²	2,5	10-95	10-95	35-95	50-95
11****	Terminal brida Bridge terminal	2,5	10-70	6-70	35-70	50-70

* No compatible con tornillo M8.

* Not compatible with M8 bolt.

** Compatible con terminal brida y terminal prisma - 70 mm².** Compatible with bridge terminal and prism terminal - 70 mm².*** No compatible con terminal brida y terminal prisma - 70 mm².*** Not compatible with bridge terminal and prism terminal - 70 mm².

**** Compatible con tornillo M8.

**** Compatible with M8 bolt.